


# CLEANING OF MILKIT SYSTEM

## RENSNING AF MILKIT ANLÆG

### CLEANING PREPERATION / FORBEREDELSE AF RENSEVÆSKE

Use protection goggles and gloves. Be aware of liquid being spilled may result in miscolouring.

Anvend beskyttelsesbriller og handsker. Undgå at spilde væsken, da den kan give misfarvninger.

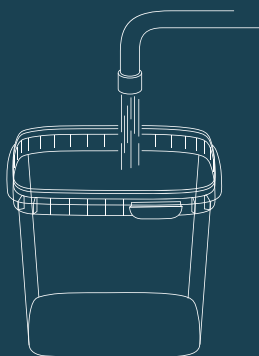


**1** Fill a large container with 3 liters of hot water (70-80°C).

Fyld en stor beholder med 3 liter rent varmt vand (70-80°).




**2** Insert 1 Milkit cleaning tablet into the water. Please make sure the tablet is thoroughly dissolved in water.

Tilsæt 1 Milkit renseset. Vær sikker på at tabletten er helt opløst i vandet.

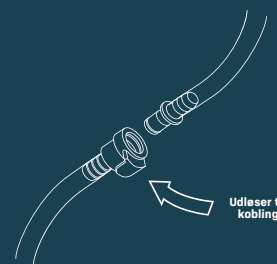


**3** Disconnect the Bag-in-Box from the Milkit system. Press the silver button of the female connector.

Frakobl Bag-In-Box posen ved at trykke på udløseren på hunkoblingen.

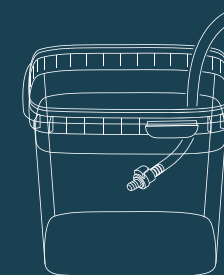


**4** Connect a spare female connector to the male connector. Place it in the container with the cleaning liquid.

Forbind en løs hunkobling på hankoblingen. Læg herefter hunkoblingen i rensesvæsken.

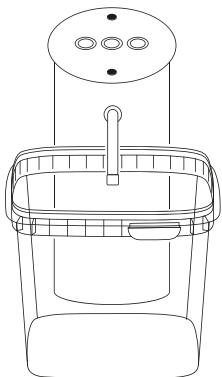


**5** Place a large empty container under the pouring tap.

*Placer en stor tom beholder under Milkit tappehanen, som kan rumme 3 liter vand.*

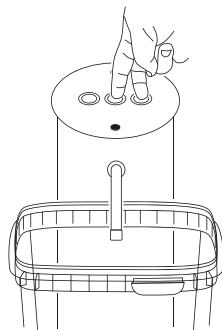


**6** Press buttons B and C simultaneously for five seconds.

*Tryk på knap B og C samtidigt i 5 sekunder.*

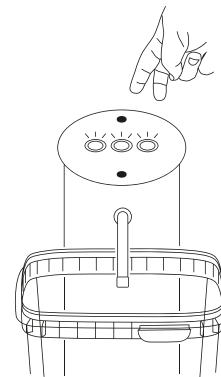


**7** When all three buttons are illuminated, the system is in cleaning mode and run automatically for approximately 3 minutes.

*Når alle tre knapper lyser er systemet i rensemode og vil automatisk køre i ca. 3 minutter.*

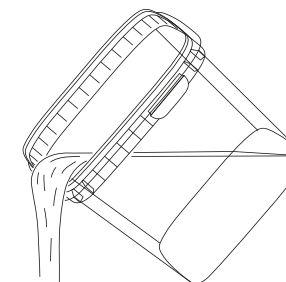


**8** Empty the two containers with the dirty cleaning liquid.

*Efter endt rensecyklus tømmes begge beholdere.*

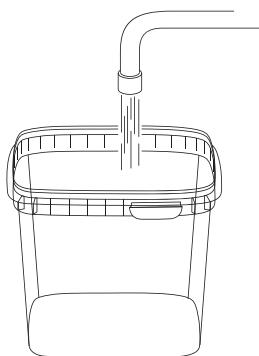


**9** Fill a large container with fresh water and place it under the counter. Place an empty container under the pouring tap.

*Fyld en stor beholder med rent vand og stil den i skabet. Stil igen en stor tom beholder under tappehanen.*

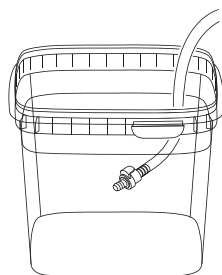

**10** Place the connector in the container holding the fresh water. Repeat steps 6-8.

*Placer hunkoblingen i beholderen med rent vand. Gentag herefter trin 6-8.*

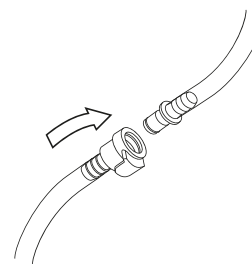

**11** Connect Bag-In-Box to Milkit system.

*Montér Bag-In-Box igen ved at trykke hunkoblingen på hankoblingen til Milkit anlægget.*



**CLEANING  
TUTORIAL**